HOBOT

S7 Pro

AIDE RAPIDE - ROBOT + APPLICATION


Robot lave-vitres - alimentation secteur continue



RobotQc


BROUILLON À VALIDER

1 SÉCURISER AVANT TOUT

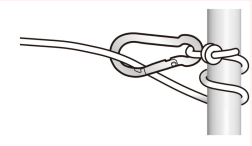


Vérifiez la corde et les nœuds.
Attachez la corde à un point fixe.
Éloignez toute personne sous la fenêtre.
N'utilisez pas une corde abîmée.

2 BRANCHER ET CHARGER

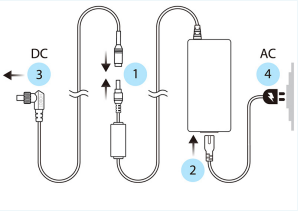

Restez branché pendant le nettoyage.
Vissez le connecteur coudé.
Avant usage, rechargez la batterie de secours, robot éteint.
orange = charge; vert = pleine.

3 SI LE ROBOT GLISSE

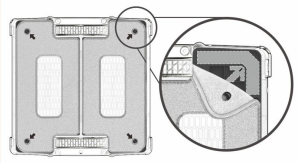


Appuyez sur **STOP** et retirez-le selon la procédure sécuritaire.
Nettoyez les chenilles.
Remplacez la lingette si elle est sale ou trop mouillée.
Posez-la à plat sans couvrir les capteurs de bord. Problème persistant : RobotQc.

4 POSER ET DÉMARRER



Gardez-le branché. Mettez l'interrupteur sur **I (ON)** et vérifiez que le ventilateur tourne.
En le tenant fermement, posez-le à **10 cm ou plus du bord**.
Relâchez seulement lorsqu'il adhère fermement.

5 PAUSE / DÉPLACEMENT

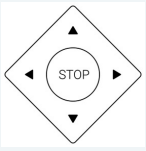

STOP arrête le nettoyage.
Relancez avec un mode automatique.
Pour le pilotage dans l'app, choisissez d'abord le **côté du robot que vous regardez**.

6 FIN DU CYCLE / RETIRER



Fin : annonce, **1 bip long + 2 courts**.
Gardez-le sous tension. Une main tient la corde, l'autre saisit le robot; retirez-le de la vitre.
Une fois en lieu sûr, interrupteur sur O (OFF).

SUR LA VITRE : CORDE ATTACHÉE + COURANT MAINTENU. L'UPS protège pendant une coupure; elle ne remplace pas le secteur.

RobotQc | 514 928-9004 | ptrahan@robotqc.ca

FR - recto

HOBOT S7 Pro - Instructions, FAQ et App officielles (consultées le 2026-09-20).
Visuels officiels recadrés, non recréés. Écrans selon version. Fiche à utiliser avec le manuel.

2026-09-20

HOBOT

S7 Pro

QUICK HELP - ROBOT + APP


Window-cleaning robot - continuous mains power



RobotQc


DRAFT FOR APPROVAL

1 SECURE BEFORE USE

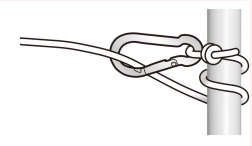


Check the rope and its knots.
Attach the safety rope to a fixed object.
Keep everyone away from below the window.
Do not use a damaged rope.

2 CONNECT AND CHARGE

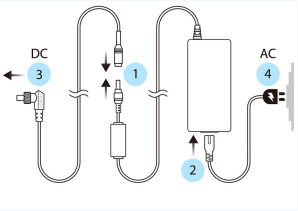

Keep mains power connected while cleaning.
Tighten the L-shaped connector.
Before use, charge the backup battery with the robot off: **orange = charging; green = full.**

3 IF THE ROBOT SLIPS

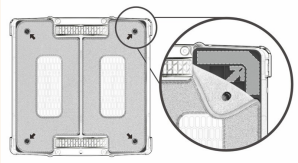


Press **STOP** and use the safe removal procedure.
Clean the caterpillar belts.
Replace the cloth if dirty or too wet.
Fit it flat without covering the edge sensors. If the problem persists: RobotQc.

4 PLACE AND START



Keep it plugged in. Set the switch to **I (ON)** and check that the fan runs.
While holding it firmly, place it **at least 10 cm from the edge**.
Release only when firmly attached.

5 STOP / DIRECTION

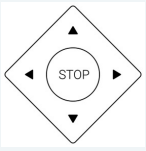

STOP stops cleaning.
Restart using an automatic mode.
For directional control in the app, first select **the side of the robot facing you**.

6 END OF CYCLE / REMOVE



At the end: voice prompt, **1 long + 2 short beeps**.
Keep it powered. Hold the rope with one hand, grip the robot with the other; remove it from the glass.
Once safe, set the switch to O (OFF).

ON THE GLASS: ROPE SECURED + POWER CONNECTED. The UPS protects during an outage; it does not replace mains power.

RobotQc | 514 928-9004 | ptrahan@robotqc.ca

EN - verso

HOBOT S7 Pro - Instructions, FAQ et App officielles (consultées le 2026-09-20).
Official artwork, cropped, not recreated. Screens vary by version. Use with the manual.

2026-09-20